


Clamp assembly – Kidney Grommet Clamp / Full Grommet Clamp


Step 1. Screw the M8 x 122mm threaded rod into the bottom of the pole. Tighten the threaded rod firmly.

Step 2. Drill a hole in the desk using the illustration below as a guide.

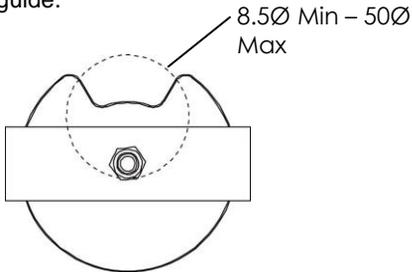

Step 3. Place the kidney grommet plate against the bottom of the pole, then put the rod through the desk hole.

Step 4. Put the flat bar against the underside of the desk and tighten with the nut supplied. Do this by using a spanner to ensure the assembly is tight.

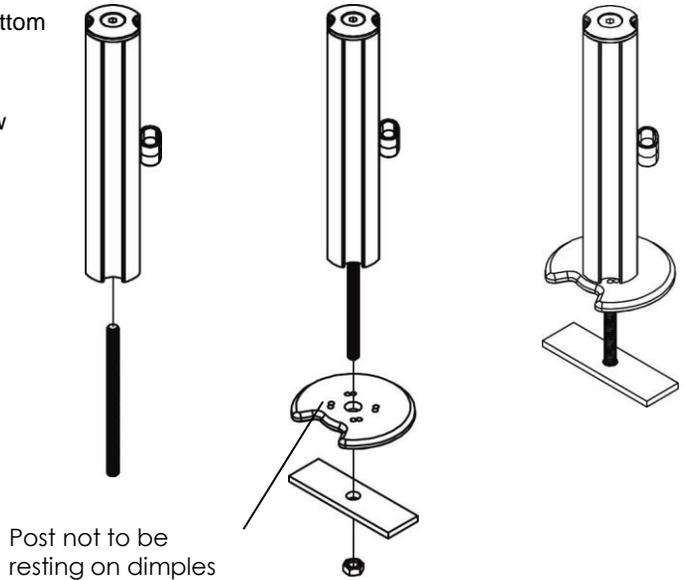

Clamp assembly - Slimline grommet clamp


Fit pole to clamp with threaded rod (fully screw the rod into the pole).

Place 1 washer against the bottom of the pole, then put the rod through the desk hole.

Put the other washer against the underside of the desk and tighten with the nut supplied.


Use a spanner to ensure that the assembly is tight.

Tighten nut with spanner

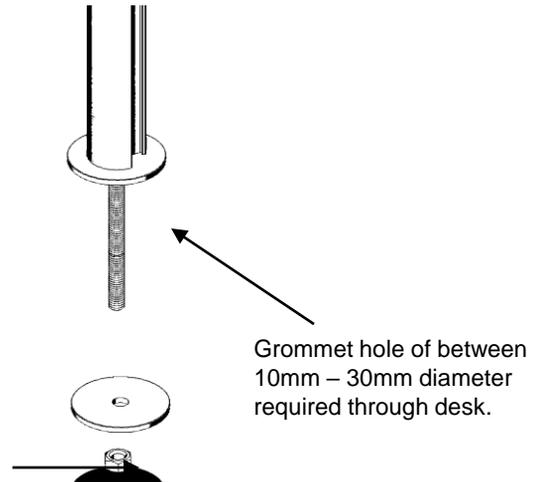

Clamp assembly - Full Grommet Clamp

Step 1. Fit pole to clamp with threaded rod and nut supplied, tighten the nut **with a spanner**

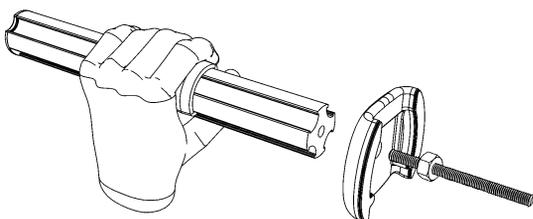

Step 2. Fit rubber pads to the top clamp and rest on the table top surrounding the grommet hole with the threaded rod passing through

